xB

2009

QUICK REFERENCE GUIDE

GET INFORMED.
ROLL.

what moves you

2009
Scion xB

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Scion xB.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Scion xB operations. Every Scion xB owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

2009 Scion xB Quick Reference Guide

OVERVIEW	Engine maintenance	7
	Fuel tank door release and cap	7
	Hood release	6
	Indicator symbols	5
	Instrument cluster	4
	Instrument panel	2-3
	Keyless entry[1]	***6***
	Light control-Instrument panel	6
FEATURES/OPERATIONS	Air Conditioning/Heating	12
	Auto lock functions[2]	***8***
	Automatic Transmission	8
	AUX audio jack	13
	Bottle holders	14
	Cruise control	11
	iPod jack	14
	Lights & turn signals	10
	Multi-information display	15
	Parking brake	8
	Power outlet	14
	Seat adjustments-Front	9
	Seat-Folding down rear seat	9
	Seats-Head restraints	9
	Steering wheel switches	13
	Tilt steering wheel	12
	Windows	11
	Window wipers & washers	10
SAFETY AND EMERGENCY FEATURES	Door locks	16
	Doors-Child safety locks	16
	Seat belts	16
	Seat belts-Shoulder belt anchor	16
	Spare tire & tools	17
	Tire Pressure Monitoring (warning) System	17

[1] Visit your Toyota dealer for information on customizing this feature.
[2] Programmable by customer. Refer to the Owner's Manual for instructions and more information.

OVERVIEW

Instrument panel

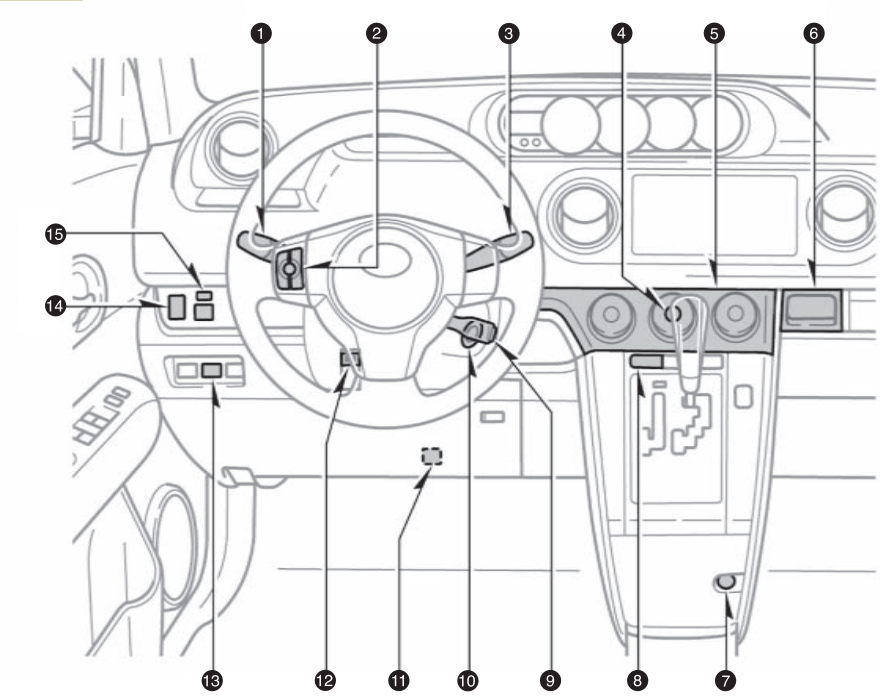

1. Headlight and turn signal controls
2. Steering wheel audio controls[1]
3. Wiper and washer controls
4. Rear window defogger switch
5. Air Conditioning controls
6. Front passenger occupant classification indicator/ Front passenger seat belt reminder light
7. Power outlet
8. Emergency flasher button
9. Cruise control
10. Engine switch
11. Tire Pressure Monitoring (warning) System reset
12. Tilt steering lock release
13. "VSC OFF" (Vehicle Stability Control "OFF")
14. Instrument panel light control dial
15. Power outside rearview mirror controls

[1] For details, refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual*.

Instrument cluster

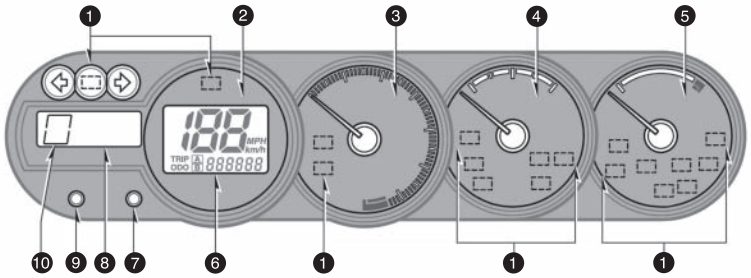

❶ Service indicator and reminder
❷ Speedometer
❸ Tachometer
❹ Fuel gauge
❺ Engine coolant temperature
❻ Odometer and two trip meters
❼ Trip meter reset knob
❽ Multi-information display
❾ Multi-information display control switch
❿ Automatic Transmission shift position indicator

Indicator symbols

- BRAKE — Brake system warning[1]
- Driver seat belt reminder[1] (alarm will sound if speed is over 12 mph)
- Front passenger seat belt reminder[1] (alarm will sound if speed is over 12 mph)
- Charging system warning[1]
- CHECK — Malfunction/Check Engine indicator[1]
- Low engine oil pressure warning[1]
- Open door warning[1]
- Airbag SRS warning[1]
- Low Tire Pressure Warning[1]
- MAINT REQD — Engine oil replacement reminder[1]
- Front passenger occupant classification indicator
- Headlight low beam indicator
- Headlight high beam indicator
- Turn signal indicator
- Low fuel level warning[1]
- Slip indicator
- VSC OFF — Vehicle Stability Control “OFF” indicator
- CRUISE — Cruise control indicator[2]
- Electric power steering system warning[1]
- ABS — Anti-lock Brake System warning[1]

[1] *For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2009 Owner’s Manual.*
[2] *If this light flashes, refer to “Cruise control,” Section 1-7, 2009 Owner’s Manual.*

Keyless entry

Locking operation

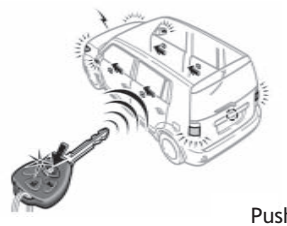

Push

Unlocking operation

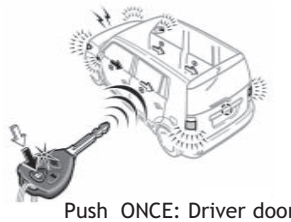

Push ONCE: Driver door
TWICE: ALL doors

NOTE: After unlocking, if a door is not opened within 60 seconds, all doors will relock for safety.

Panic button

Push and hold

Hood release

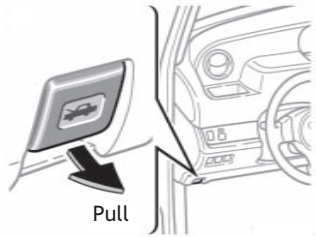

Pull

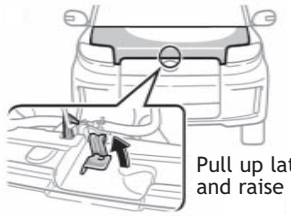

Pull up latch
and raise hood

Light control-Instrument panel

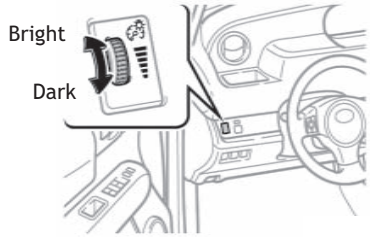

Bright

Dark

Fuel tank door release and cap

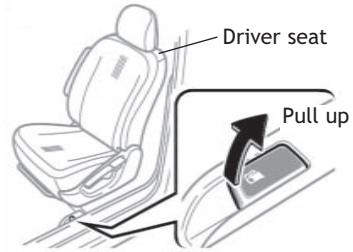

Driver seat

Pull up

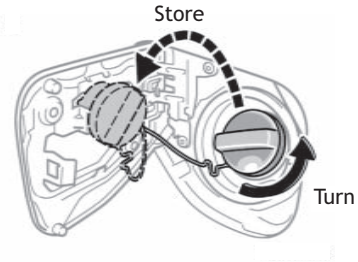

Store

Turn

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Engine maintenance

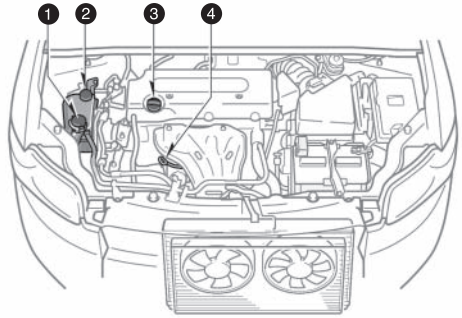

1. Windshield washer fluid tank
2. Engine coolant reservoir
3. Engine oil filler cap
4. Engine oil level dipstick

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

FEATURES/OPERATIONS

Auto lock functions

Automatic door locks can be programmed to operate in four different modes, or turned OFF.
-Doors lock when shifting from Park.*
-Doors lock when the vehicle speed goes above approximately 12 mph.
-Doors unlock when ignition key is turned to “ACC” or “LOCK” position and driver’s door is opened.
-Doors unlock when shifting into Park.*

* Automatic Transmission only

Refer to the *Owner’s Manual* for more details.

Automatic Transmission (if equipped)

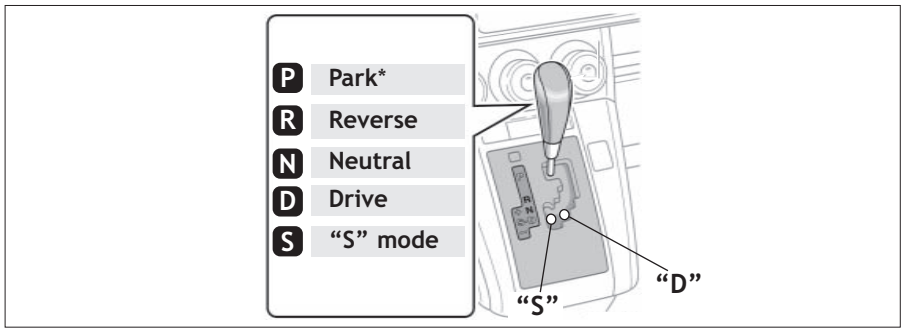

* The engine switch must be ON, and the brake pedal depressed to shift from Park.

“S” (Sequential) mode

Push shift lever to the left from “D” position.

“S” position:
+: Upshift (push and release)
-: Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Parking brake

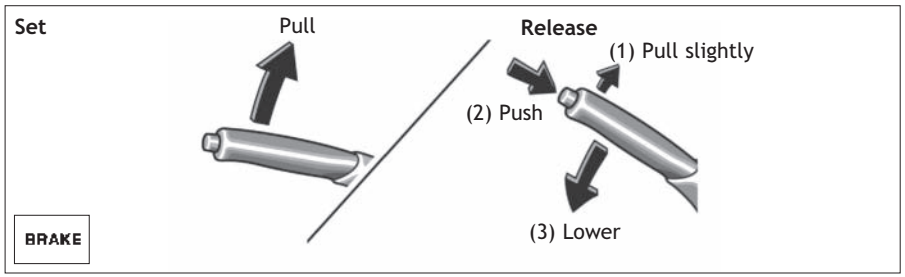

Seats-Head restraints

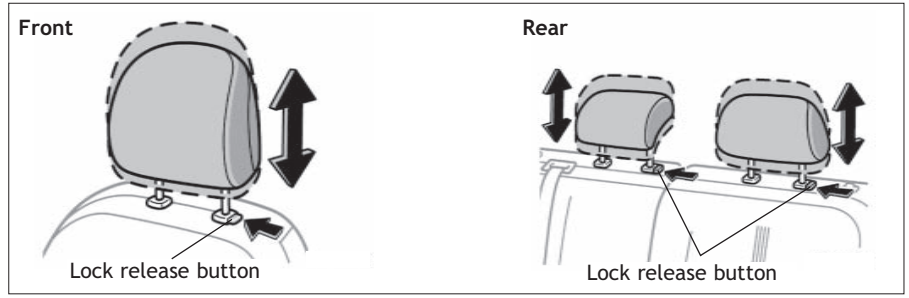

Seat adjustments-Front

1. Position
2. Height crank (driver side only)
3. Seatback angle

Seat-Folding down rear seat

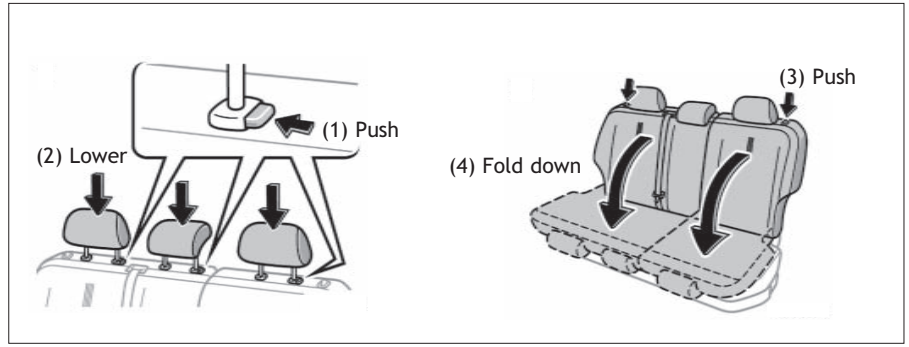

Lights & turn signals

Headlights

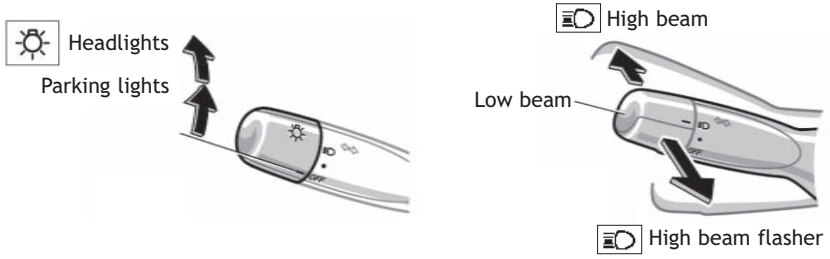

Turn signals

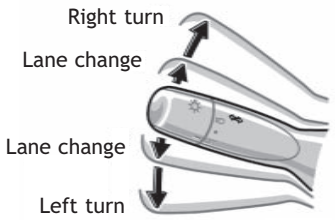

Window wipers & washers

Front

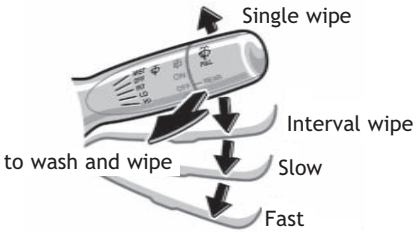

Rear

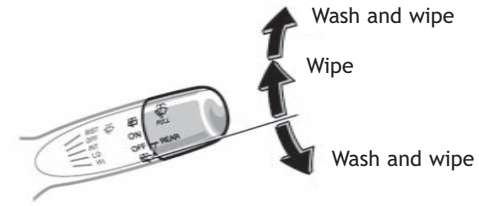

Windows

Driver side

Automatic operation (driver side only) Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Cruise control

System ON/OFF

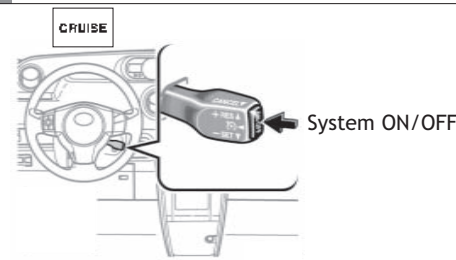

Functions

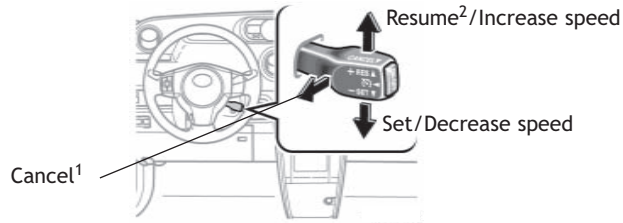

[1] The set speed may also be cancelled by depressing the brake pedal.
[2] The set speed may be resumed once vehicle speed reaches 25 mph.

Tilt steering wheel

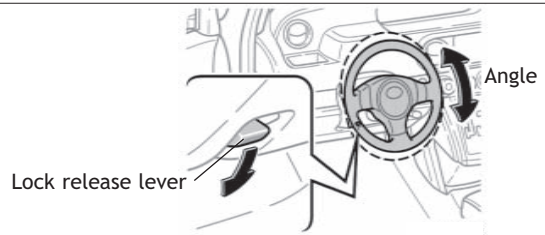

Hold wheel, push lever down, set angle and return lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Air Conditioning/Heating

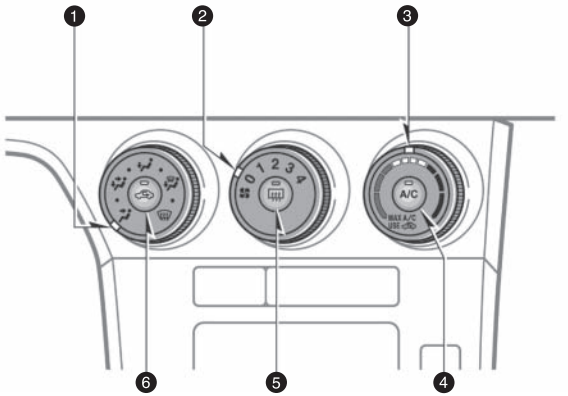

1. Airflow vent
   In " " or " " mode, fresh air (" " indicator "OFF") reduces window fogging.
2. Fan speed
3. Temperature
4. Air Conditioning ON/OFF
   Use fresh air to quickly cool interior, then change to recirculate for cooler air.
5. Rear window defogger
6. Fresh or recirculated cabin air

Steering wheel switches

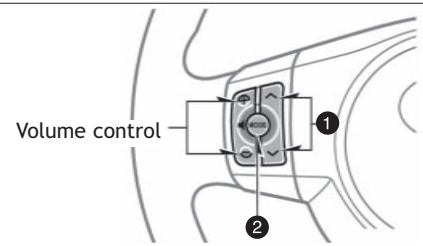

1. **" ∧ ∨ "**
   -In radio mode Push to select a preset station; push and hold to seek the next strong station.
   -In CD mode Push to skip up or down to a next/previous track.
2. **"MODE"**
   Push to turn audio ON and select an audio mode. Push and hold to turn the audio system OFF.

Refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual for more details.*

AUX audio jack

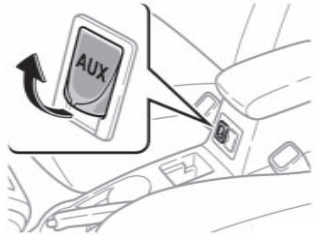

By inserting a mini plug into the AUX jack, you can listen to music from a portable audio device through the vehicle's speaker system.

If you do not have a SCION genuine audio system, you will not be able to use the AUX jack.

Refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual for more details.*

iPod jack

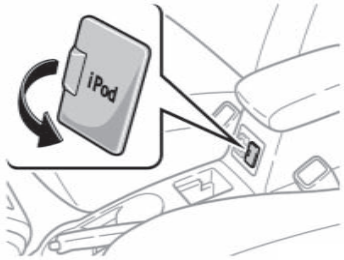

By inserting an iPod customer cable connector into the iPod jack, you can charge the iPod battery and listen to music from your iPod through the vehicle's speaker system.

If you do not have a SCION genuine audio system, you will not be able to use the iPod jack.

Refer to the *SCION Audio System Owner's Manual* or *SCION Navigation System Owner's Manual for more details*.

Power outlet

Instrument panel

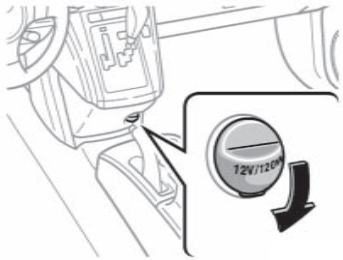

Designed for car accessories. Key must be in the "ACC" or "ON" position to use.

Bottle holders

Front door

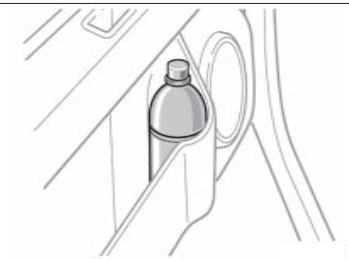

Multi-information display

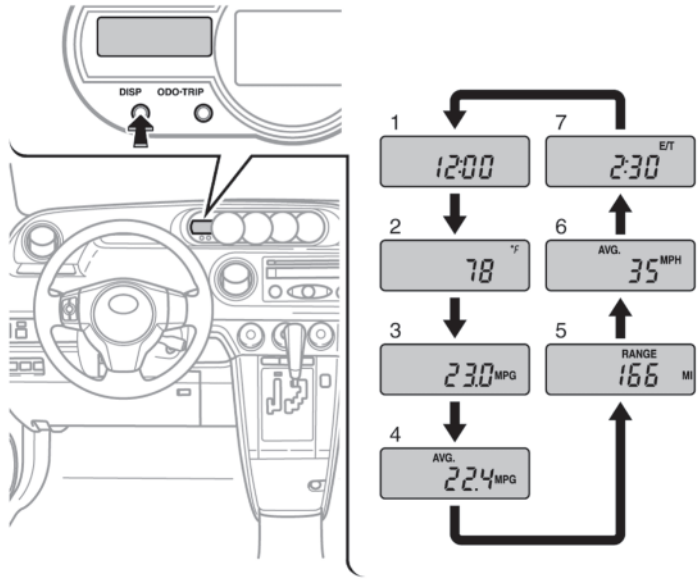

Push "DISP" to change information in the following succession:
(1) Clock
(2) Outside temperature
(3) Current gas mileage (MPG)
(4) Average gas mileage (AVG/MPG)
(5) Miles left on remaining fuel (RANGE/MI)
(6) Average vehicle speed from engine start (AVG/MPH)
(7) Running time from engine start (E/T)

SAFETY AND EMERGENCY FEATURES

Door locks

Driver side

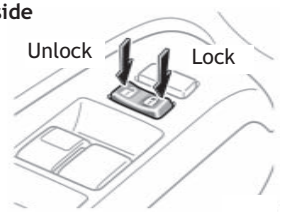

Passenger side

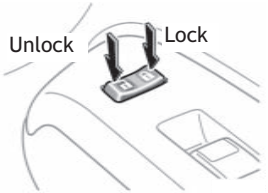

Doors-Child safety locks

Rear door

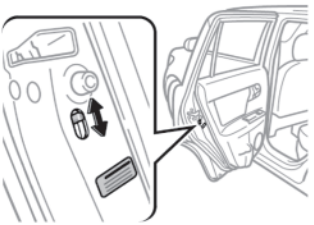

Moving the lever to “LOCK” will allow the door to be opened only from the outside.

Seat belts-Shoulder belt anchor

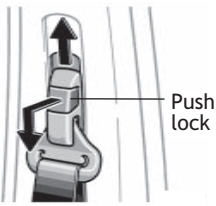

Seat belts

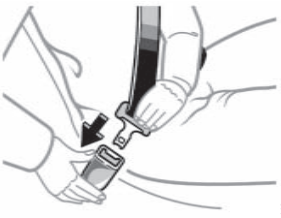

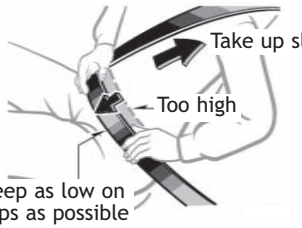

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner’s Manual*.

Tire Pressure Monitoring (warning) System

If tire pressure indicator light is on, check/adjust each tire.

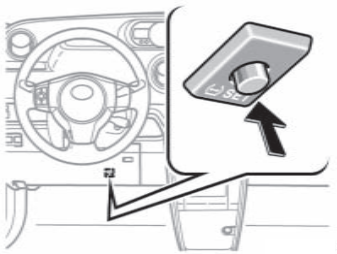

After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “ SET” button until indicator blinks three times. Then allow the vehicle to sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner’s Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Spare tire & tools

Tool and spare tire location

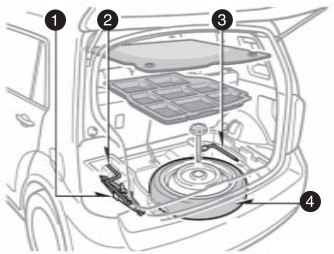

1. Jack
2. Jack handle
3. Wheel nut wrench
4. Spare tire

Removing the spare tire

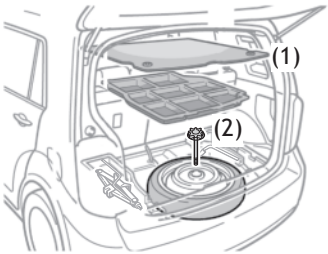

(1) Remove the spare tire cover.
(2) Loosen and remove the bolt.

Refer to the *Owner’s Manual* for jack positioning and tire changing procedures.

EMAIL
www.scion.com
> Contact

-

CHAT
www.scion.com
> Have a Question?
> Contact

-

PHONE
1.866.70.SCION

-

MAIL
SCION
19001 S. Western Ave.
D102, P.O. Box 2742
Torrance, CA 90509-2742
USA

-

WEB
www.scion.com

-

©2009 Scion, a marque of
Toyota Motor Sales, U.S.A., Inc.

00505-QRG09-XB